X·MINI

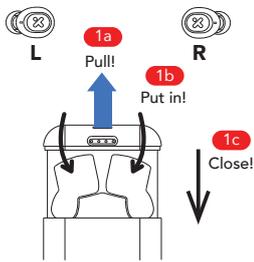THE X-MINI™
LIBERTY+ X•BASS

USER MANUAL | TRUE WIRELESS XOUNDPODS™

1. Eartip
2. Multi-Function Button (MFB)
3. Microphone
4. Earpods LED Indicator
5. Charging Dock LED Indicator
6. Leather Pull Tab
7. Micro USB Charging Port
8. Charging Pin

FIRST TIME SET UP

L 1a Pull!
R
1b Put in!
1c Close!

Pull leather strap to slide out the cradle. The charging dock battery level indicator will light up. Insert the Earpods into its respective LEFT / RIGHT nests. Close cradle to initiate Power On on earpods.
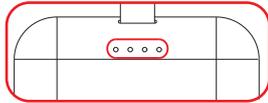
MANUALLY POWER ON/OFF

L / R
X1

Power ON
Press the MFB button **ONCE** on both Earpods, light below the MFB button will light up to initial Power On

L / R
3s

Power OFF
With the earpods on your ear, press and hold the MFB button for **3 SECONDS**, you will hear the prompt tone. Let go at the 2nd set of prompt, Power Off prompt will be heard.

CHARGING DOCK, EARPODS CHARGING INDICATOR

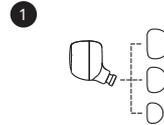| 25% capacity left	50% capacity left	75% capacity left	100% capacity left
●●●●	●●●●	●●●●	●●●●

Charging
Placed both Earpods back to the charging dock, light below the button will appear solid orange

Full Charge
Once both Earpods are fully charged, the light below the button will be off.

Note:
1. Both Earpods will auto power on once the battery level drops below 25%, do charge the charging dock to 100% before using the Earpods.
2. Both Earpods will auto power off while charging dock is in state of being charged.

Note:
Charge the Earpods as soon as possible when you hear "Battery level low" voice prompt.

WEARING TIPS

1

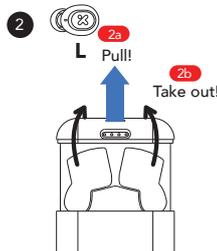Select the appropriate eartip size. By default, mid-size is fitted.

2
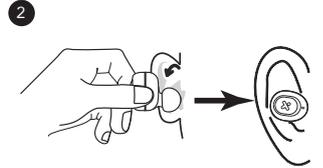
Check the LEFT / RIGHT indications before inserting them into your ears.

Insert the Earpod with the eartip facing towards your ear canal. Twist gently until it fits comfortably and feel secure in your ear.
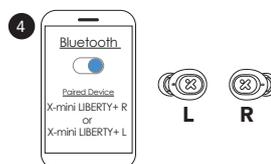
STEREO PAIRING

1 Bluetooth

Switch off the Bluetooth on your device.

2 **L** 2a Pull! **R** 2b Take out!
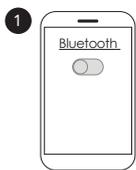
Pull leather strap to slide out the cradle. Take out both Earpods to initiate Auto-Stereo Pairing.

3 Bluetooth
Available Device
X-mini LIBERTY+ R
or
X-mini LIBERTY+ L
L **R**

Once LEFT and RIGHT Earpods are connected, the Master Earpod will flash orange and white.
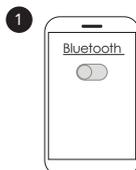Switch on the Bluetooth on your device and search for "X-mini LIBERTY+ R" or "X-mini LIBERTY+ L", tap to pair.

4 Bluetooth
Paired Device
X-mini LIBERTY+ R
or
X-mini LIBERTY+ L
L **R**

Once connection is successful, both Earpods will intervally flash white. Pairing successful prompt will be heard.
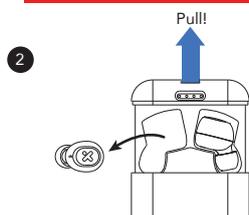
Note:
1. The pairing name selected will be the master Earpod.
2. After successful connection, you will be prompted to connect another X-mini LIBERTY+ or headset, just tap PAIR.
3. You will only need to pair once. Subsequently Earpods will auto connect once Power ON.

STANDALONE PAIRING

1 Bluetooth

Switch off the Bluetooth on your device.

2 Pull!

Pull silicon tab to slide out the cradle. Take out either side of Earpods.

3 Bluetooth
Available Device
X-mini LIBERTY+ L
or
X-mini LIBERTY+ R

Search for "X-mini LIBERTY+ L" or "X-mini LIBERTY+ R" under available device, tap to connect. Pairing successful prompt will be heard.

Note:
1. If you device prompts for connection code, enter code "0000" to proceed.
2. Erase pairing name which were paired before.
3. If pairing name is not shown on your device, press MFB button TWICE.
4. Keep at least 10m apart from your the other device when pair as standalone.

THE X-MINI™

LIBERTY+ X•BASS

USER MANUAL | **TRUE WIRELESS** XOUNDPODS™

BASIC FUNCTIONS CONTROL

MUSIC CONTROLS

L **R**
OR
X1 X1
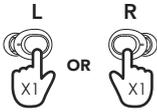
M1. Play / Pause
Press either side of the Earpods' MFB button **ONCE** to play or pause.

R
X2

M2. Next Track
Press the RIGHT Earpod MFB button **TWICE** to go next track.

R
X3

M3. Previous Track
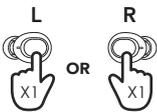Press the RIGHT Earpod MFB button **THRICE** to go previous track.

L
X2

M4. Volume Up
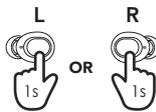Press the LEFT Earpod MFB button **TWICE** to increase volume.

L
X3

M5. Volume Down
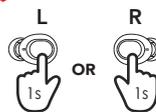Press the LEFT Earpod MFB button **THRICE** to decrease volume.

CALL CONTROLS

L **R**
OR
X1 X1

C1. Answer / End
Press either side of the Earpods' MFB button **ONCE** to answer/end call.

L **R**
OR
1s 1s

C2. Reject
Press and hold either side of the Earpods' MFB button for **1 SECOND** to reject incoming call.
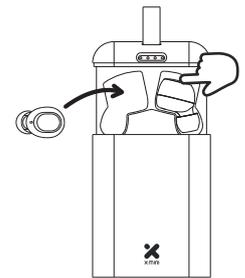
ACTIVATE AI

L **R**
OR
1s 1s

Press and hold either side of the Earpods' MFB button for **1 SECOND** to activate / deactivate AI.

MASTER RESET

Place the earpods into the charging dock. Press and hold the MFB buttons the earpods for **5 SECONDS** while the earpods are in the charging mode

Note:
Preform this action only when Stereo Pairing fails.

TECHNICAL SPECIFICAIONS

Type
In-Ear Canalphone

Headphone Driver
6mm Graphene-Coated Dynamic

Frequency Response
20Hz - 20Khz

Microphone
Sensitivity: -42±3dB

Playback time
Up to 9 hours*, 72 hours (max)**

*Varies according to volume and genre.
*+Per fully charged dock.

IPX rating
7 (certified Waterproof)

Weight
10g (earpods)
86g (charging case)

Cradle Charging time
2 hours (min)

Battery Type
Lithium ion polymer battery
Earpods:
3.7V 50mAh 0.18Wh
Charging case:
3.7V 800mAh 2.96Wh

Charging Port
Micro USB
Input Voltage: 5V/1A

Bluetooth Operation Range
Version: V5.0
Frequency Range: 2.402 - 2.48GHz
Up to 10 metres (33 feet)

Bluetooth Profile
HSP, HFP, A2DP, AVRCP

Audio Codec
SBC, AAC, aptX

Battery Information

1. This product is built-in with non-removeable, rechargeable Lithium ion polymer battery. Please use the bundle micro-USB to charge the product.
2. Don't use a charger with current more than 5V/1A to charge the product.
3. Please full charge the product before initial usage.
4. Use an authorized charger to charge the product. Using unathorized charger may demage the product.
5. Repeated charging the product will cause battery performance degradation over time.

LIMITED WARRANTY

1. If this product or any part thereof is proven to be defective by reason of faulty work faulty workmanship or defects in materials within 12 months of purchase, we will at our option repair or replace the product free of charge, on condition that the original invoice or sales receipt with the date of purchase, or stamp from the dealer is presented together with the defective unit.
2. The warranty does not cover product failures which have been caused by use of accessories or other peripheral devices are not original X-mini™ branded accessories intended for use with the product.
3. The warranty does not cover product failures caused by modifications, repairs and disassembly by any person who is not authorised by the manufacturer.
4. Any defective unit or part shall become property of the manufacturer. The warranty does not cover any damage caused by misuse, drop, hit or neglect.